

# lovio

HOME

## Air fryer PureFry **EN** User manual



Model: LVAF001BK  
Rated voltage: 220-240V~50/60Hz  
Rated power: 1450 W

**Keep these instructions for future reference and pass them on to future users of the device.**



## SAFETY ISSUES

### WARNING! Risk of electric shock

1. This "Safety Notice for Using" records important contents that can enable you to use the product safely and correctly and prevent personal injury or property damage to you or others.
2. This product is a Class I appliance. Please use a 10A or above socket alone, and ensure that the socket is effectively grounded before use, and confirm that the input power supply is 220-240V~, 50/60Hz.
3. This product is a high-power electrical appliance. It is strictly forbidden to use flexible cord mobile socket or share a socket with other electrical appliances.
4. This product cannot operate in the mode of external timer or independent remote control system.
5. In case the power cord is damaged, it must be replaced by professionals to avoid danger.
6. Do not pull, press or hang the line along the tip or sharp edge, and keep away from heat and moisture sources; Do not insert foreign matters such as metal into the heat dissipation hole or gap, otherwise damage or electric shock may be caused.
7. In case of damage to the power cord and plug or failure of this product, please stop using it and send the product to the store for repair or replacement to avoid danger.
8. It is strictly forbidden to pull the power cord and unplug the power cord before moving the product; It is strictly forbidden to immerse the power cord, plug and this product in water or other liquids to prevent electric shock.
9. It is strictly prohibited to put anything on the top of the air fryer when it is working, and cover or block the heat dissipation part of the air fryer to avoid fire.
10. It is strictly forbidden to heat the closed container in the air fryer to avoid explosion.
11. It is strictly forbidden to use the air fryer near inflammables or heat sources, and it should be away from curtains and other similar objects to avoid fire.
12. Please use the air fryer in a dry environment, and do not use this product outdoors.
13. Please place the air fryer on an insulated surface and keep a distance of at least 20cm around it.
14. Please keep the product at a certain distance from the walls, cabinets and inflammables, so as to prevent the furniture from being polluted by oil smoke or the product from heating and causing fire.
15. It is strictly forbidden for children and people with incomplete limbs, sensory or mental disorders or lack of relevant experience and knowledge to use this product alone. In case there is a child nearby when using, special attention should be paid. Please put this product out of the reach of children.
16. Do not damage, over bend, stretch or twist the power cord and do not put heavy objects on the power cord or clamp it.
17. Please pull the plug out of the socket after use or when it is not used for a long time, so as to avoid the risk of electric shock or leakage due to insulation.
18. If you want to take out the fryer when it is working, please move it carefully to avoid scalding.
19. Please use the accessories provided by the manufacturer correctly, and do not use the accessories not provided by the manufacturer, so as to avoid fire or injury caused by human operation.
20. Please unplug the power cord and wait until the air fryer cools down before cleaning, moving or repairing it.
21. Please clean the air fryer regularly to prevent the residual grease from deteriorating; Please do not wipe the heating pipe directly with a rag.
22. This product will release high-temperature steam from the air outlet when working. Please keep your hands and face a safe distance from the steam and the air outlet, and pay attention to the high-

temperature steam and hot gas when removing the fryer from the product. The accessible surface of this product may become very hot during operation.

23. **Warning:** charcoal or similar fuels should not be used in this product.

24. Do not move the air fryer when there is food in it.

 
25. In case the air fryer emits black smoke during use, unplug the power immediately, and take the fryer out of the main machine after the smoke stops.

## **SAFETY NOTICE FOR FIRST USE**

**PLEASE READ THE MANUAL CAREFULLY BEFORE USE AND KEEP IT PROPERLY FOR OTHER USERS' REFERENCE AT ANY TIME.**

Please take out all the accessories and accessories in the air fryer or the packing box. Please use warm water to clean the fryer, fryer basket and steam box, and wipe the inside of the air fryer with a soft damp cloth, and wait for it to dry completely before using. Please reserve enough space around the air fryer to ensure that its surface is more than 20cm away from other items, and no items can be placed on the top of the air fryer. Please adjust the temperature to the maximum and preheat it for 10-15 minutes to remove the antirust oil on the surface of the heating pipe of the air fryer before using this product for the first time. It is normal to have slight smoke when using it for the first time.


## **PRODUCT INTRODUCTION**

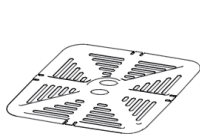


Oil rack




 Fryer basket

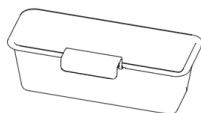

Steam box

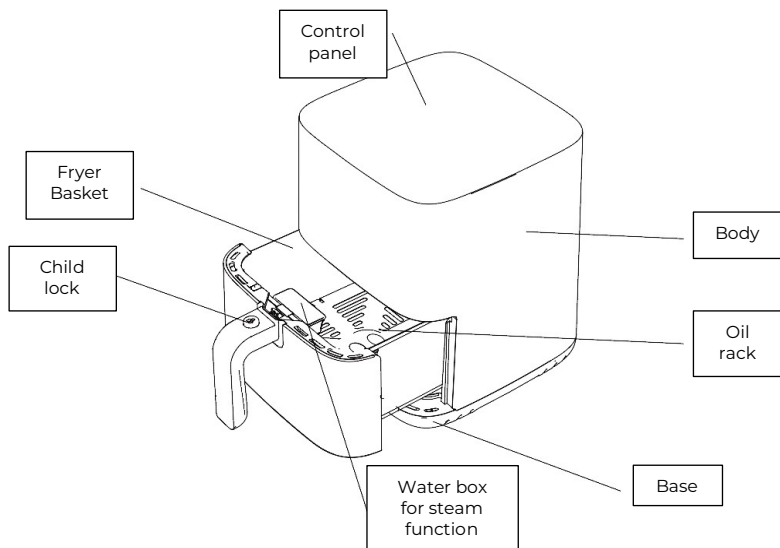 


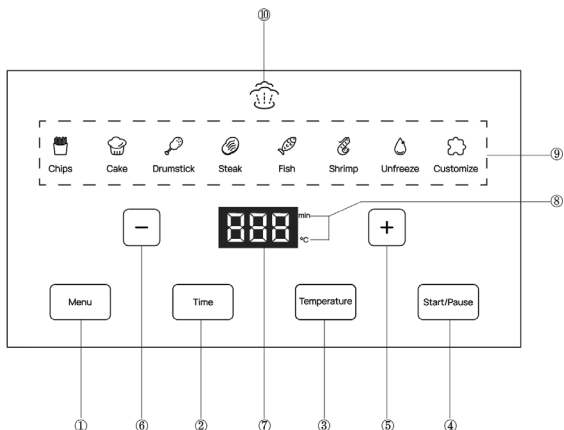 

1. Menu: function selection key	2. Time: time selection key
3. Temperature: temperature selection key	4. Start/pause: click the start / pause key and press and hold for 3 seconds to force cancellation
5. +:Time / temperature increase key	6. -:Time / temperature decrease key
7. LED screen: time / temperature display	8. Min / ° C: time / temperature state switching
9. Function display area	10. Steam breathing lamp

## OPERATION METHOD

 
1. Insert the plug into a grounded power outlet.
2. Press the child lock key, carefully pull the fryer basket out of the air fryer, remove the oil rack and steam box, then clean and wipe it.
3. Install the oil rack into the fryer basket, put the food on the oil rack, add an appropriate amount of purified water into the steam box and put it in the designated position of the fryer basket (**steam function is optional**), and then put the fryer basket into the air fryer.

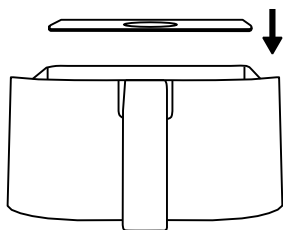


Reminder: since the internal temperature of the fryer is high when the product is working, if the steam box function is used, it must be completed before power on to prevent scalding. It is not recommended to add water to the steam box when it is working.

**NOTE:** THE FRYER NEEDS TO BE PUSHED IN PLACE, OTHERWISE THE PRODUCT WILL NOT BE POWERED ON.

 4. Please connect the power supply after installing the fryer, and the product will be in standby mode (as shown in the figure right, all indicators are on).

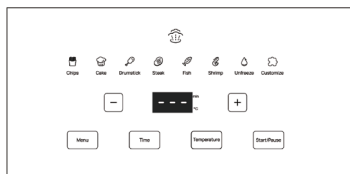


 5. Menu selection: click the "Menu" key to select the required function. The selected function key will flash. Click the "Start/Pause" key to confirm the selected function.

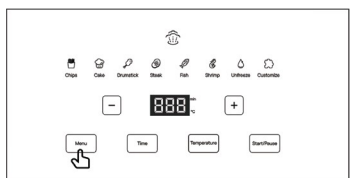


**You can click the "Temperature" key to return to the temperature adjustment interface after adjusting the time and adjust the temperature again by clicking the "Temperature" key.**

 7. Time function: click the "Time" key, and the LED screen will switch to display the recommended time corresponding to this function, which can be adjusted by "+" "-" according to the actual situation.

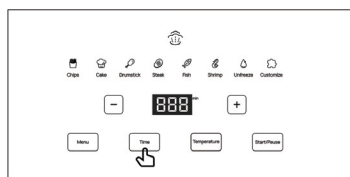

8. Start function: click the "Start/Pause" key to start the machine. You can click the "Start/Pause" key to pause cooking during the process. When you need to turn or add ingredients halfway, you can long press the "Start/Pause" key for 3 seconds to end the cooking in advance.

**After cooking is completed or finished in advance, the LED interface will display "Off" and turn off after 3 seconds, switching to the power saving mode. You can press the "Start/Pause" key again to reselect the function menu.**

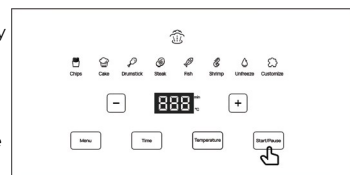 

9. The product will give a prompt sound at the end of the cooking time, indicating that the cooking is complete. You can take out the food in the frying pan after it is slightly cooled.

**Note: there will be residual grease in the fryer after cooking. Do not turn the fryer over with the food, so as not to mix the grease with the food and affect the taste of the food.**

10. This product has power-off memory function. When the basket is taken out during the operation of the product, the product will automatically stop working, and the product will continue to work after the basket is put back in place. The power-off memory function is effective within 60 minutes of power-off.

## KINDLY REMINDER:

1. The time and temperature in the recipe are for reference only. The specific time is related to the voltage, temperature, amount and size of ingredients, which can be adjusted according to the actual situation.
2. You can take out the fryer basket halfway and turn the ingredients over to make the ingredients heated more evenly and delicious.
3. Snacks that can be cooked in an oven are also suitable for electric ovens.
4. You can set the temperature of the electric oven to 150°C and cook for up to 10 minutes to reheat the food.
5. Do not put inflammables such as plastic or paper in the air fryer.

## CLEANING AND MAINTENANCE

1. Please cut off the power supply and unplug the plug before cleaning the air fryer, and wait until it is completely cooled.

**Reminder: taking out the fryer can make the electric oven cool down faster.**

2. The fryer and oil rack are covered with non-stick coating. Please do not use metal kitchenware or abrasive cleaning materials to avoid damaging the non-stick coating.
3. Please clean the fryer and oil rack with hot water, detergent and non-abrasive sponge.
4. Please clean the inside of the product with hot water and non-abrasive sponge.
5. Please store the product in a cool and dry place after it is dried.

## FAQ

Fault	Reason description	Solutions
Power light does not on	The plug is not plugged in or the power supply is dead	Tighten the plug or replace the socket
Product does not work	The product is not powered on	Adjust the power supply and confirm that the power light is on
Product does not work	Not put into the fryer basket	Put in the fryer basket and ensure that the microswitch is on
Unable to fry food	Too low temperature	Increase the set temperature according to the recipe
	Too short time	Increase the set time according to the recipe
	Too much food in the fryer	Fry the food in batches
Unevenly fried	Didn't turn over the food when frying	Take out the frying pan when it is half fried, and turn the food up and down
Unable to put the fryer into the product	Too many ingredients in the fryer	Take out some ingredients
	The fryer is not put into the air fryer	Put the fryer in
White smoke at work	Cooking greasy ingredients	It is normal for the ingredients to have a large amount of oil leakage during frying
	Residue left in the fryer after last use	Please use after cleaning

## FAULT CODES

**Error prompt:** Error prompts and solutions can be displayed on the touch screen.

Code	Reason description	Solutions
E1	Sensor open circuit	Product failure, please contact after-sales customer Service
E2	Sensor short circuit	Product failure, please contact after-sales customer service

**Reminder:** in case the problem cannot be solved, do not disassemble the machine without permission. Please contact the after-sales customer service for handling. In case the above content is inconsistent with the real object due to the change of model or parts, please take the real object as the standard without further notice. Thank you for your understanding.

# lovio

## HOME

SERVICE HOTLINE

**tel: +48 22 123 96 60 lub e-mail: [serwis@manta.com.pl](mailto:serwis@manta.com.pl)**

Monday to Friday, 9 a.m. to 5 p.m.

The manufacturer reserves the right to make changes to the product specifications without prior notice.



Manta S.A. hereby declares that this product complies with the essential requirements and other provisions of the so-called "New Approach" Directives of the European Union. The device complies with the European Directive 2014/35/EU.



The device is marked with the symbol of a crossed-out waste container, in accordance with European Directive 2012/19/EU and the Polish Act of 11 September 2015. (Journal of Laws 2015 item 1688) on Waste Electrical and Electronic Equipment (WEEE). Products marked with this symbol should not be disposed of or thrown away with other household waste at the end of their useful life. The user is obliged to dispose of waste electrical and electronic equipment by delivering it to a designated point where such hazardous waste is recycled. The collection of this type of waste in separate locations and the proper recovery process contribute to the protection of natural resources. Proper recycling of waste electrical and electronic equipment has a positive impact on human health and the environment. For information on where and how to dispose of waste electrical and electronic equipment in an environmentally safe manner, the user should contact the relevant local authority, the waste collection point or the point of sale where they purchased the equipment.

### Attention!

Product design and technical specifications are subject to change without prior notice. This applies in particular to technical specifications, software, pictures and the user manual. This user manual serves as a general orientation for the operation of the product. The manufacturer and distributor assume no liability for any inaccuracies resulting from errors in the descriptions contained in this user manual.

Made in P.R.C.  
**FOR MANTA EUROPE**