

lovio  
HOME

**Electric kettle**  
**EN User manual**



Model: LVSEK001

Rated voltage: 220-240V~50/60Hz

Rated power: 2200W

**Keep these instructions for future reference and pass them on to future users with the device.**

# SAFETY ISSUES




## **WARNING! Risk of electric shock**

1. Read all instructions before using.
2. **CAUTION:** Remember that the housing of the appliance may be hot. Take care not to cause burns.
3. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
4. The attached base cannot be used for other than intended use.
5. Do not operate the appliance without load to avoid damaging the heat elements.
6. Unplug from the outlet when not in use.
7. Do not let the cord hang over edge of table counter or touch hot surface.
8. Do not place on or near a hot gas or electric burner or in a heated oven.
9. Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
10. Ensure that kettle is used on a firm and flat surface where the children can't touch, this can prevent from overturning the kettle to damage the person or kettle.
11. To protect against a fire, electric shock, or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
12. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
13. Be careful when opening the lid for refilling when the kettle is hot.
14. Close supervision is necessary when any appliance is used by or near children.
15. Do not touch the hot surface. Use the handle or the button.
16. Extreme caution must be used when moving an appliance containing hot water.
17. The appliance is not a toy. Do not let the children play it.
18. The use of attachments that are not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
19. While boiling water, avoid to contacting steam from the spout when water is boiling or just after it has switched off. Do not be anxious to uncover the lid.
20. Unplug from outlet when not in use and before cleaning; Allow it to cool before putting on or taking off parts and before cleaning the appliance.
21. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
22. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
23. Do not use the appliance for other than intended use.
24. Do not move the unit while the kettle is switched on.

25. The kettle can only use with the stand provided.
26. If the kettle is overfilled, boiling water may be ejected.
27. Do not use the kettle outdoors.
28. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
29. Children shall not play with the appliance.
30. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
31. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.
32. Save these instructions.
33. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
34. **WARNING:** During the boiling process and when pouring out hot water, the lid must be kept closed at all time.
35. The kettle is only to be used with the stand provided.
36. **CAUTION:** Insure that the kettle is switched off before removing it from its stand.
37. The appliance must not be immersed.

## PRODUCT DESCRIPTION

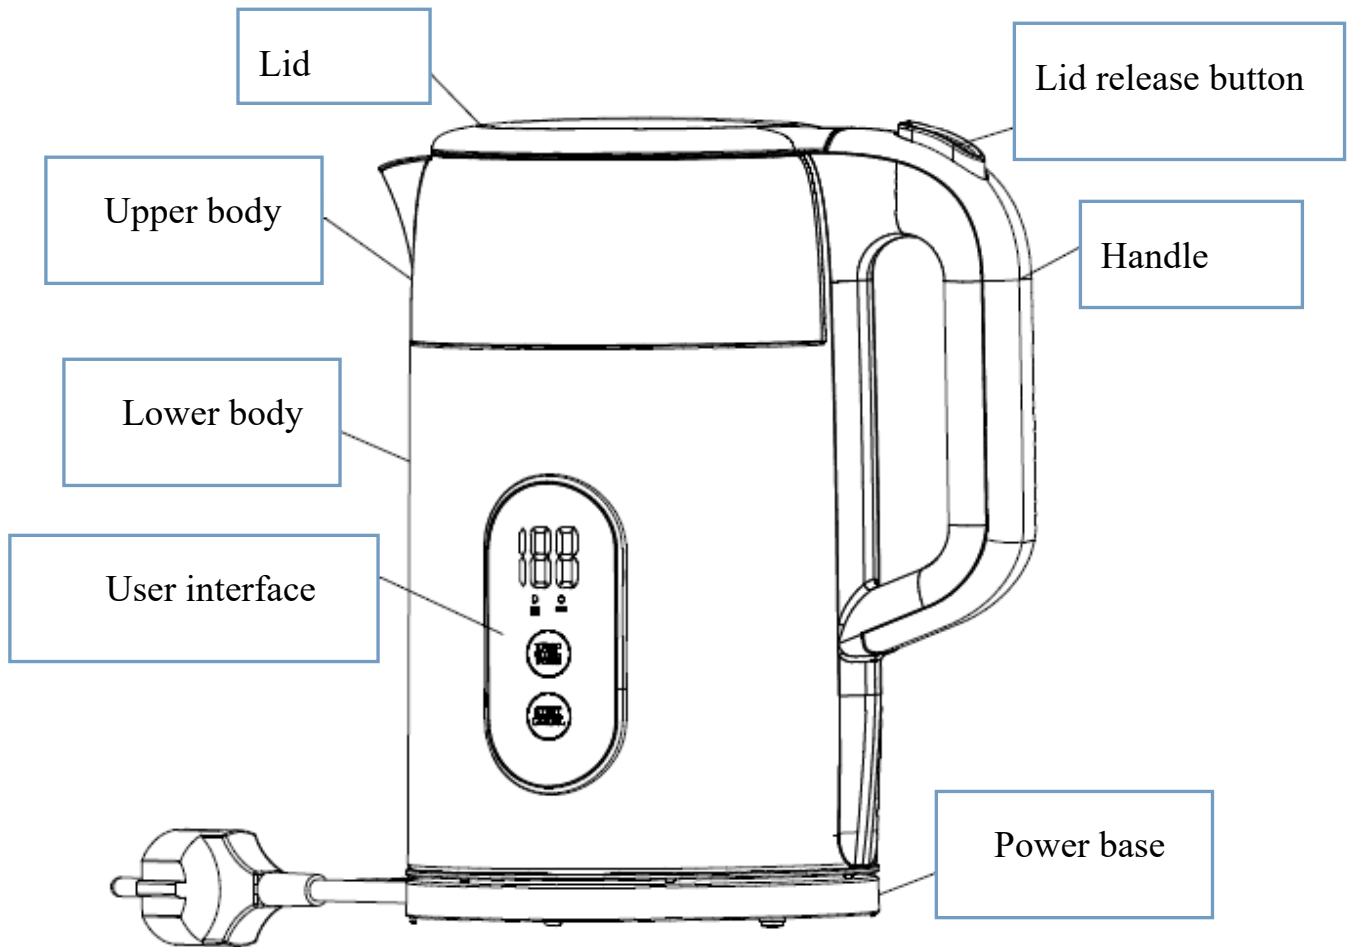

### BEFORE FIRST USE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the Max capacity of water once and then discarding the water. Wipe the surface with a damp cloth.

**NOTE:** The max capacity of kettle is 1.5L.

### USING YOUR ELECTRIC KETTLE

#### A. Boil water only.

1. Place the unit on the level surface.
2. To fill the kettle, remove it from the power base and open the lid by pressing the lid release button, fill with the desired amount of water, and then close the lid. The water level should not exceed MAX mark or

sit below MIN level. Too little water will cause the kettle switching off before the water has boiled.

**NOTE:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

3. Position the kettle on the power base.
4. Plug into the power outlet, the screen displays the current temperature in standby mode.
5. Press the "START/CANCEL" button once, the indicator of "START" will light up until the water is boiled, then the buzzer will sound 3 times to indicate that the boiling is finished. If you need keep warm function, you can touch the "KEEP WARM" button during water boiling.

**NOTE:**

1. After entering the working state, press the "START/CANCEL" button to exit the program. Press the "START/CANCEL" or "KEEP WARM" button again to continue boiling water or keeping warm;
2. If there is no operation for 10 minutes, all the lights of the product will be extinguished and the kettle will enter the standby mode.

**B. Heat water to the preset temperature and keep warm on there**

1. According to the steps of 1-4 in the section of "Boil water only".
2. Press the "KEEP WARM" button, the "KEEP WARM" indicator lights up.
3. Press the "KEEP WARM" button repeatedly, the temperature values will be displayed sequentially from 40°C, 60°C, 80°C to 90°C, which flashes to confirm the selected temperature.

**NOTE:** The display temperature differs from the actual temperature by  $\pm 5^{\circ}\text{C}$ . The temperature display consists of one "1" and two "8".

4. When the holding temperature is selected, the "KEEP WARM" indicator flashes and the kettle starts to heat up the water and keep it at the preset temperature. The indicator will extinguish after the holding time is finished.

NOTE: The memory function is activated during KEEP WARM state only. You can pour some water in the process of warm keeping. If the kettle is not placed back on the power base for a long time, or the water temperature drops by more than  $10^{\circ}\text{C}$  from the currently set temperature

after power resumption, the memory function will be automatically cancelled.

### **C: Boil water firstly and keep warm on preset temperature**

1. According to the steps of 1-4 in the section of "Boil water only".
2. Press the "KEEP WARM" button repeatedly to choose a holding temperature among 40°C, 60°C, 80°C and 90°C, the "KEEP WARM" indicator flashes to indicate the selection state is entered. Press "START/CANCEL" to confirm.
3. The "START" indicator lights, the kettle starts to boil water and the boiling will be completed with 3 beeps as a prompt.
4. The "START" indicator extinguishes, "KEEP WARM" indicator lights up, the kettle enters keep-warm stage. The "KEEP WARM" indicator will be turned off after the holding time is finished.

### **Notes:**

- a. Every first time the power is connected, the screen is fully lit for self-test;
- b. Every time the button is triggered, there is a "beep" prompt, in addition to turning off the screen, the buzzer should ring once when selecting any function, and it will sound 3 times when the water has been boiled;
- c. The holding time of 40°C and 60°C is 4 hours, and 2 hours for 80°C and 90°C. You should re-select the temperature after the holding time is over, otherwise, the kettle enters standby state;

### **DRY-BOIL PROTECTION**

Should you accidentally let the kettle operate without water, the function of dry-boil protection will automatically switch off the power. If this occurs, allow the kettle to cool prior to filling with cold water before re-boiling.

### **CLEANING AND MAINTENANCE**

Always disconnect the appliance from the power outlet and allow it to cool down completely before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.

2. Wipe the appearance of body with a damp cloth or cleaner, never use a poisonous cleaner.

**CAUTION:** Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.

3. When the kettle is not in use, the power cord may be wound under the power base.

4. The kettle must keep water higher than min level especially when you pour off water every time for that the unit has a memory function, and it would be danger if the kettle is in “keep warm” stage.

## **REMOVAL OF MINERAL DEPOSITS**

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle and cause less efficient operation. You can use the commercially available descaler and follow the instructions its package. Alternatively, you may follow below instructions using the white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then add water to the amount to cover the bottom of kettle completely. Leave the solution in the kettle overnight.

2. Discard the mixture in the kettle, fill the kettle with clean water to the maximum level, boil water and then discard the water. Repeat several times until the odor of vinegar has been flushes away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

# lovio

## HOME

SERVICE HOTLINE

**tel: +48 22 123 96 60 or e-mail: [serwis@manta.com.pl](mailto:serwis@manta.com.pl)**

Monday to Friday, 9 a.m. to 5 p.m.

The manufacturer reserves the right to make changes to the product specifications without prior notice.



Manta S.A. hereby declares that this product complies with the essential requirements and other provisions of the so-called "New Approach" Directives of the European Union. This product complies with Directive 2014/30/EU



The device is marked with the symbol of a crossed-out waste container, in accordance with European Directive 2012/19/EU and the Polish Act of 11 September 2015. (Journal of Laws 2015 item 1688) on Waste Electrical and Electronic Equipment (WEEE). Products marked with this symbol should not be disposed of or thrown away with other household waste at the end of their useful life. The user is obliged to dispose of waste electrical and electronic equipment by delivering it to a designated point where such hazardous waste is recycled. The collection of this type of waste in separate locations and the proper recovery process contribute to the protection of natural resources. Proper recycling of waste electrical and electronic equipment has a positive impact on human health and the environment. For information on where and how to dispose of waste electrical and electronic equipment in an environmentally safe manner, the user should contact the relevant local authority, the waste collection point or the point of sale where they purchased the equipment.

### Attention!

Product design and technical specifications are subject to change without prior notice. This applies in particular to technical specifications, software, pictures and the user manual. This user manual serves as a general orientation for the operation of the product. The manufacturer and distributor assume no liability for any inaccuracies resulting from errors in the descriptions contained in this user manual.

Made in P.R.C.

**FOR MANTA EUROPE**