



# PODSTAWA DO PROJEKTORA


## ■ Podręcznik instalacji

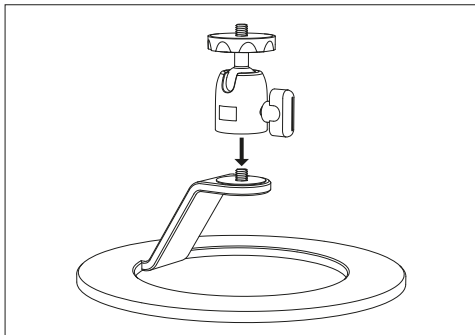


- ① Weź podstawę i głowicę obrotową, przełóż śrubę przez otwór w podstawie od dołu do góry. Wyrównaj śrubę w dolnej części i wkręć śrubę.

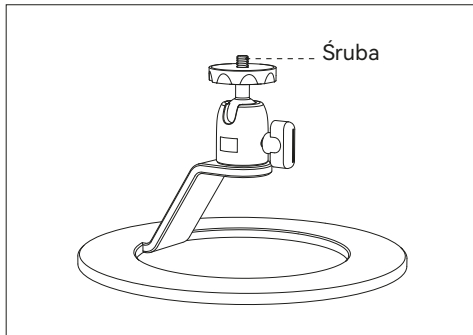

- ② Dokręć śruby, aby ukończyć montaż stojaka; Głowica obrotowa posiada śrubę 1/4 cala na górze, która jest odpowiednia dla projektorów z otworem na śrubę 1/4 cala na dole.

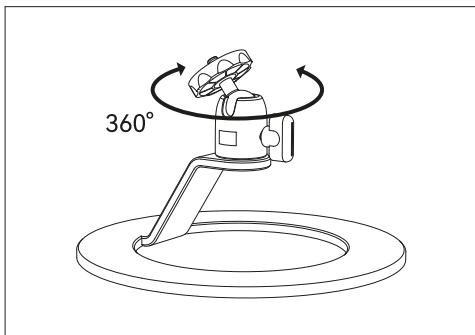


- ③ Głowica obrotowa może obracać się o 360° w poziomie, a kąt można dostosować według wymagań.

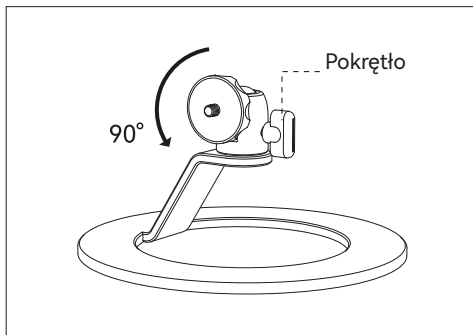


- ④ Głowica obrotowa może maksymalnie obrócić się o 90° w kierunku pionowym. Dostosuj do odpowiedniego kąta, a następnie poluzuj gałkę, aby ustawić stojak. Możliwość obrotu może się różnić w zależności od wielkości projektora

## ■ Zawartość opakowania

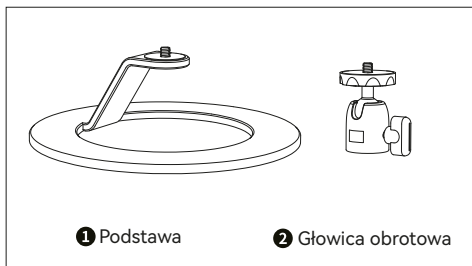


# DESKTOP PROJECTOR STAND


## ■ Installation guide

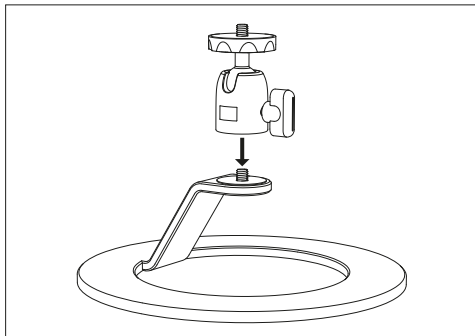


- ① Align the screw-hole in the pan tilt head with the screws on the base and screw in clockwise.

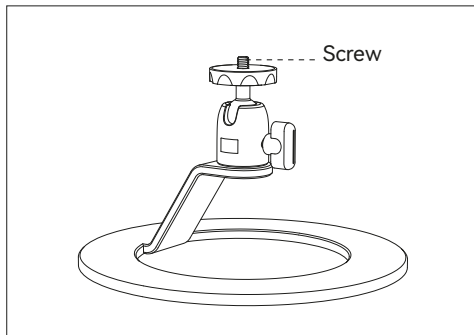

- ② The pan tilt head has a 1/4 screw at the top, which is suitable for projectors with a 1/4 screw-hole at the bottom.

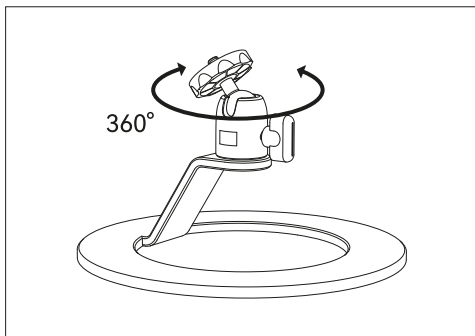


- ③ The pan tilt head can rotate 360° horizontally, and the angle can be adjusted according to the requirements.

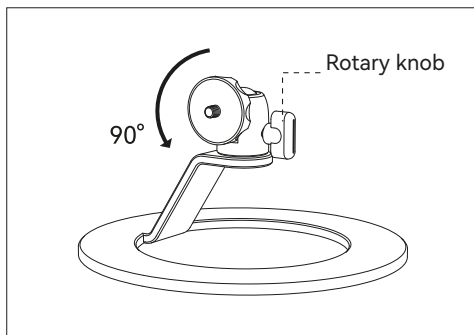

- ④ The pan tilt head can rotate 90° in the vertical direction at most. Adjust to a proper angle and then tighten the knob to fix the stand. Rotation capacity may vary depending on projector size

## ■ Accessory list

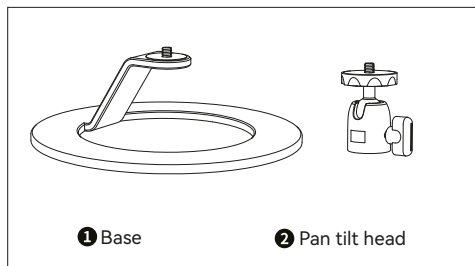

① Base

② Pan tilt head